

**PROGRAMMABLE
TRANSMITTER**



OPERATOR DIVISION
22790 LAKE PARK BLVD.
ALLIANCE, OHIO 44601



54853



⚠ WARNING

Moving Door can cause serious injury or death.

- Do Not install remote unless the door operator's safety reverse works as required by the door operator's manual.
- Wall control must be mounted in sight of door at least 5 feet above floor and clear of moving parts.
- Keep people clear of opening while door is moving.
- Do Not allow children to play with the transmitter or door operator.
- Do Not operate a door that jams or has a broken spring.

If safety reverse does not work properly:

- Disconnect operator using the manual release handle.
- Do Not use transmitter or door operator.
- Refer to Door or Door Operator Owner's Manuals before attempting any repairs.

Electrical Shock can cause serious injury or death.

- Power cord must be unplugged before attaching any wires.
- When replacing cover, make sure wires are not pinched or near moving parts.
- Operator must be properly grounded.
- Be sure wire ends do not touch each other or other terminals.

If you have questions or if you need a manual, contact the distributor or manufacturer of the operator.

P/N 109126.500809

10/19/10

PARTS AND SERVICE

For parts and service, contact the nearest Distributor. When ordering parts, please specify:

MODEL NUMBER
PART NUMBER
PARTS DESCRIPTION


For Technical Service, please call
1-800-275-6187

OPEN THE CASE

Remove visor clip by pulling it back out of the groove. Remove the exposed screw. Squeeze the upper housing half at the grooved area to separate from the lower housing.

SETTING THE CODE SWITCHES

The code switches are located next to the battery. Note that each of the nine switches has three positions.

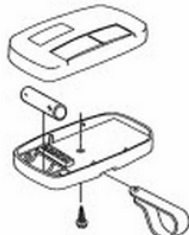


This device complies with FCC rule Part 15. Operation of this device is subject to the following two conditions.
1. This device may not cause harmful interference.
2. This device must accept any interference that may be received, including interference that may cause undesired operations.

**SETTING THE TRANSMITTER
SECURITY CODE SWITCHES**

Transmitters have assigned channels per button as shown



 Set Switches 1 through 9 at any security code, press and hold desired channel. Now press learn. The green LED will flash indicating the channel is stored. One flash is for channel one, two for channel two, three for channel three, and four for channel four. The transmitter has now stored the code in the corresponding channel until the learn switch is pressed again.



Available for code setting

**SETTING THE RECEIVER
SECURITY CODE**

RECEIVERS OR OPERATORS WITHOUT CODE SWITCHES
Program the desired button to the control device as stated in the Receiver or operator owners manual.

RECEIVERS OR OPERATORS WITH CODE SWITCHES.
Set switches 1 through 9 in each receiver or operator in the exact positions as switches 1 through 9 were set on that particular channel when the codes were stored in the transmitter.

CHANNEL #1
CHANNEL #2
CHANNEL #3
CHANNEL #4